



*IonMate*TM

COPPER
TEST KIT

Model EC-70 • Item # PM06064
www.completeaquatics.com

Instructions Card



*IonMate*TM

COPPER
TEST KIT

Model EC-70 • Item # PM06064
www.completeaquatics.com

Instructions Card



*IonMate*TM

COPPER
TEST KIT






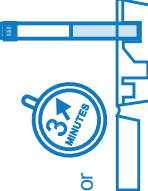
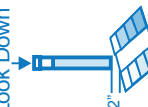
Model EC-70 • Item # PM06064

www.completeaquatics.com

Instructions Card

COPPER TEST KIT Model EC-70 • Item # PM06064








*Hazardous Materials: Read MSDS and product label before use.

<p>1. Fill tube (0106) to the 10 mL line with sample water.</p> 	<p>2. Add 5 drops of Copper A (P-6367) to tube.</p> 	<p>3. Cap and invert tube to mix.</p> 	<p>4. Remove cap and add 5 drops of *Copper B (P-6368) to tube.</p> 	<p>5. Cap and invert tube to mix.</p> 
<p>6. Insert tube into holder. Wait 3 minutes for full color development.</p> 		<p>7. Remove cap and hold tube so bottom is 1/2 inch above the white area of the color chart. Match color by looking down into the tube.</p> <p>NOTE: Always empty and rinse tubes promptly after testing to avoid staining.</p> 		

Complete Aquatics • 68 H and S Dr • Selinsgrove • Pennsylvania • 17870 • USA

COPPER TEST KIT Model EC-70 • Item # PM06064






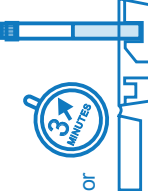
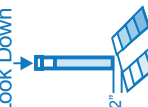
*Hazardous Materials: Read MSDS and product label before use.

<p>1. Fill tube (0106) to the 10 mL line with sample water.</p> 	<p>2. Add 5 drops of Copper A (P-6367) to tube.</p> 	<p>3. Cap and invert tube to mix.</p> 	<p>4. Remove cap and add 5 drops of *Copper B (P-6368) to tube.</p> 	<p>5. Cap and invert tube to mix.</p> 
<p>6. Insert tube into holder. Wait 3 minutes for full color development.</p> 		<p>7. Remove cap and hold tube so bottom is 1/2 inch above the white area of the color chart. Match color by looking down into the tube.</p> <p>NOTE: Always empty and rinse tubes promptly after testing to avoid staining.</p> 		

Complete Aquatics • 68 H and S Dr • Selinsgrove • Pennsylvania • 17870 • USA

COPPER TEST KIT Model EC-70 • Item # PM06064

*Hazardous Materials: Read MSDS and product label before use.

<p>1. Fill tube (0106) to the 10 mL line with sample water.</p> 	<p>2. Add 5 drops of Copper A (P-6367) to tube.</p> 	<p>3. Cap and invert tube to mix.</p> 	<p>4. Remove cap and add 5 drops of *Copper B (P-6368) to tube.</p> 	<p>5. Cap and invert tube to mix.</p> 
<p>6. Insert tube into holder. Wait 3 minutes for full color development.</p> 		<p>7. Remove cap and hold tube so bottom is 1/2 inch above the white area of the color chart. Match color by looking down into the tube.</p> <p>NOTE: Always empty and rinse tubes promptly after testing to avoid staining.</p> 		

Complete Aquatics • 68 H and S Dr • Selinsgrove • Pennsylvania • 17870 • USA